

HANDLE

Use the snap lock to at bottom of the handle and fastened it to the grinder.



Find the thinnest part of the handle and put the place as it is shown in the picture, for the Portable Mode.



ADJUSTMENT

Loosen the knob. Adjust the grind setting by holding the adjustment ring and grinder body still with one hand and turning the handle with your other hand. Clockwise to go finer, CCW to go coarser.



The stepless adjustment system has 3 rounds and each has a mark on the side. We encourage you to find your own coffee making style.

GRINDING

When you find the ideal grinding size, tighten the knob very gently.

Note: Do not tighten the knob too much. Turn the handle CCW to grind your coffee beans.



MEASUREMENT

The lid capacity is 16 grams / 0.5 ounce. It has a measurement mark which represents 9 grams / 0.3 ounce. These are approximate measurements because coffee beans have different densities depending on how they were grown, processed and roasted.



Replace the lid to avoid the popcorn effect while the grinding process.

CLEANING

Loosen the knob and take it out. Turn the handle until you take out the head part. Clean with a brush.

Do not use water in any part of the grinder.

